


PRINTER WALL REFERENCE

Pathfinder® Ultra® Silver (6032™) Printer


Pathfinder® Ultra® Gold (6037™) Printer

Loading Supplies in Peel Mode


- 1 Put the printer in load mode and open the cover.

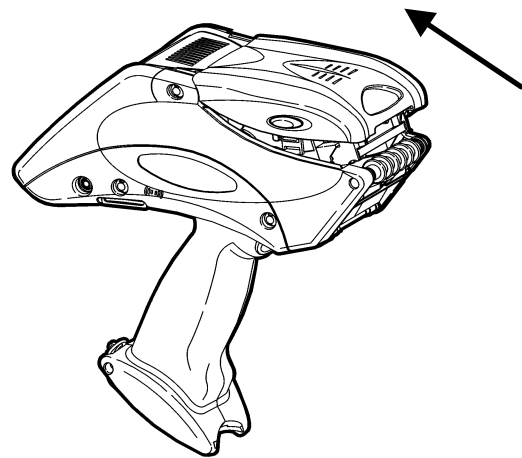


- 2

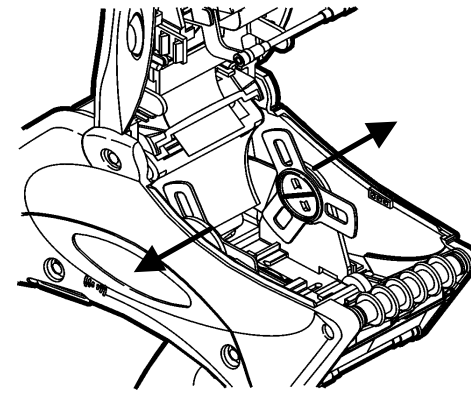



- 3

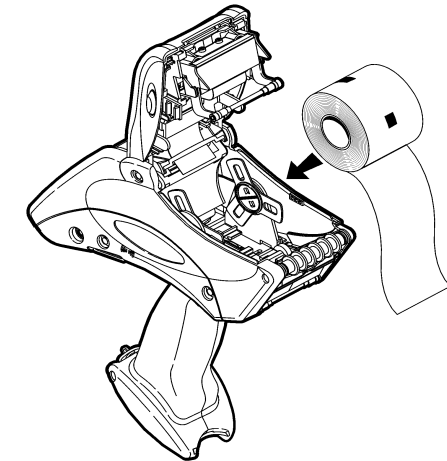


- 4 Peel four inches of labels from the backing paper.

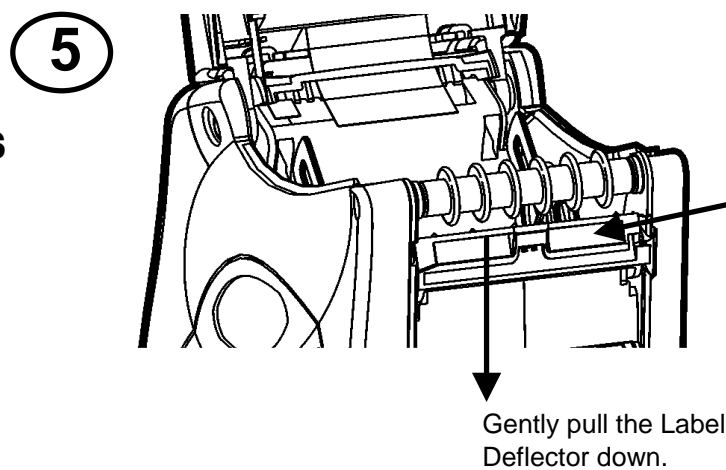

- 6

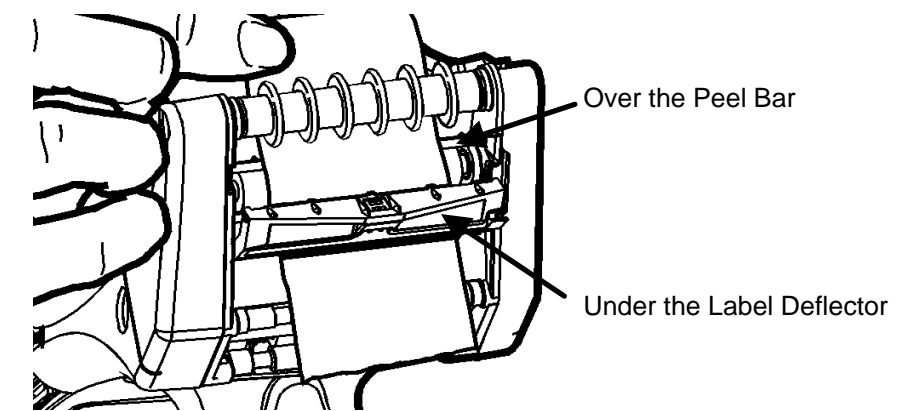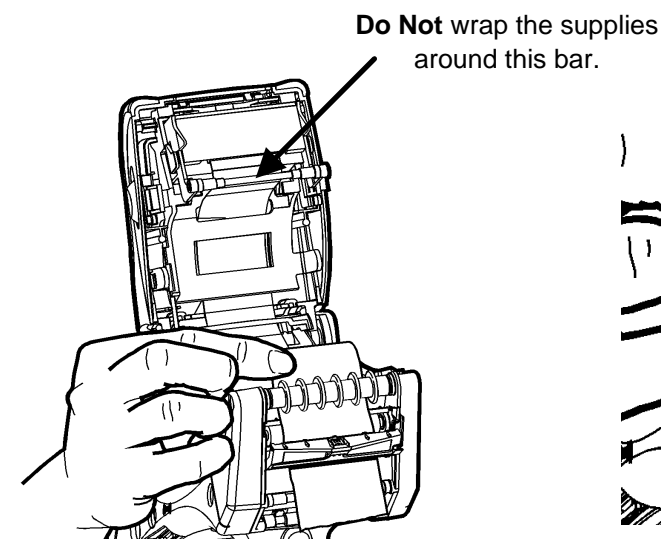


- 7 Push the Label Deflector up until it snaps into place.

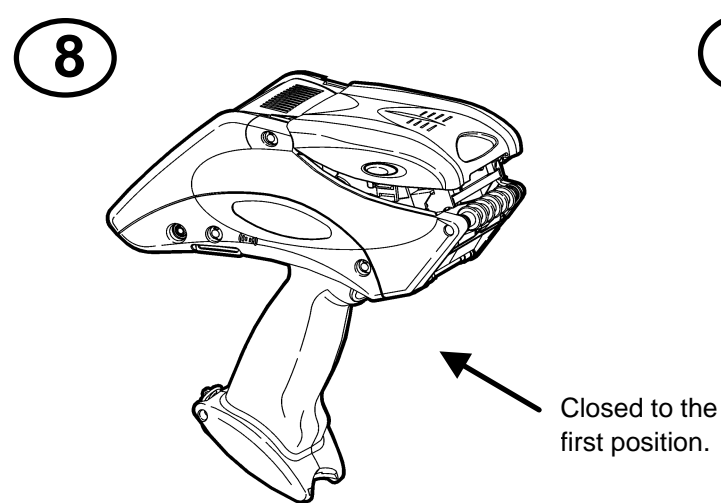

- 9


- Pull the backing paper OVER the Guide Roller, down to the Pinch and Feed Rollers. Press the trigger.

- 10 Close the cover.

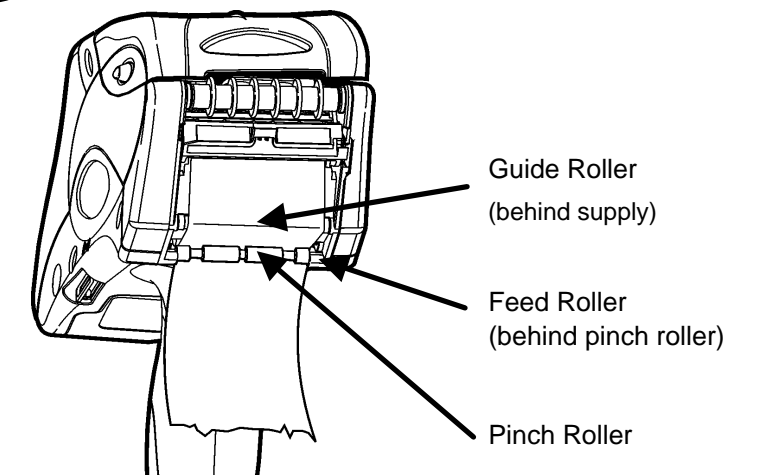


Cleaning Your Printer

Platen Roller

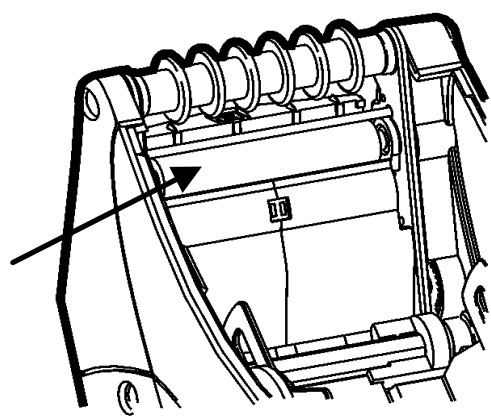


Use a dry, soft-bristle brush.

Pinch and Feed Rollers

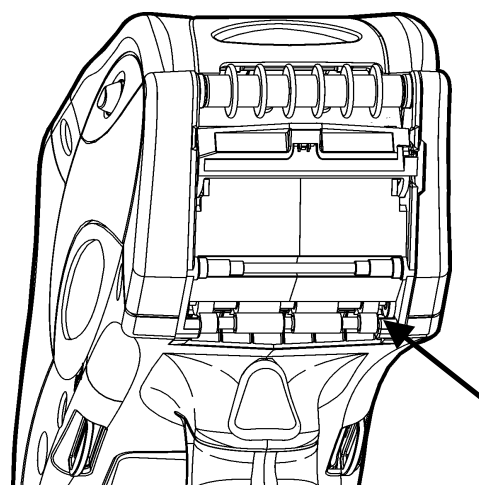


Use a dry, lint-free cloth.

Printhead

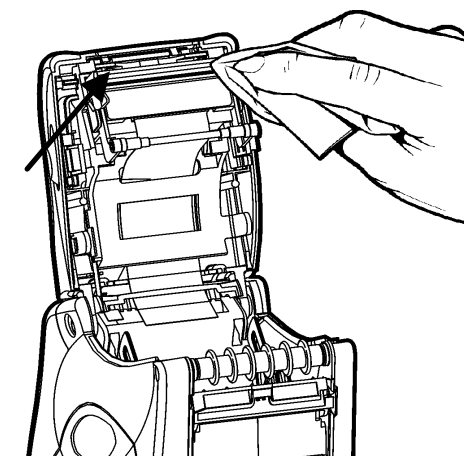


Use a cleaning pen or a soft cloth, lightly moistened with 99% Isopropyl Alcohol.

Printer Flex Cable

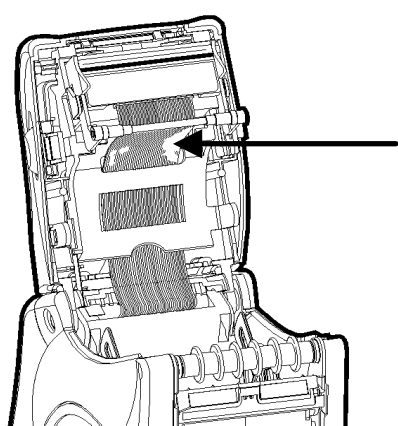


Use a soft cloth, lightly moistened with 99% Isopropyl Alcohol.

On-Demand Sensor

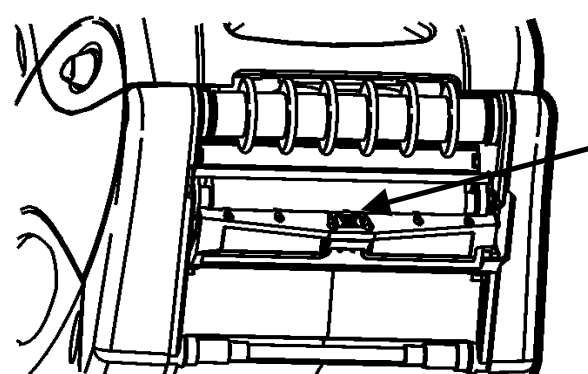


Use a dry cotton swab.

Scanner Window

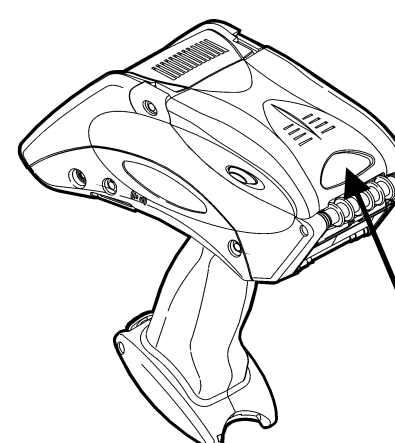

Use a soft cloth, lightly moistened with water.

Black Mark Sensor

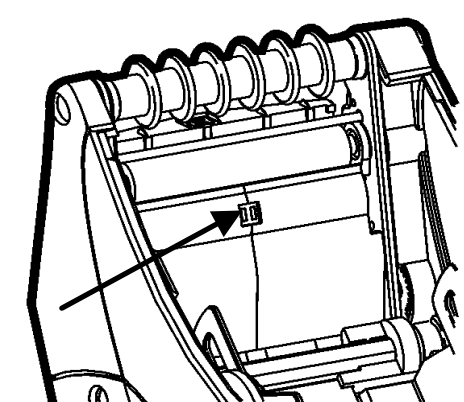

Use a dry cotton swab.


PRINTER WALL REFERENCE

PAXAR
We Make Your Sales Work(s)™

Pathfinder® Ultra® Silver (6032™) Printer


Pathfinder® Ultra® Gold (6037™) Printer

Loading Supplies in Non-Peel Mode

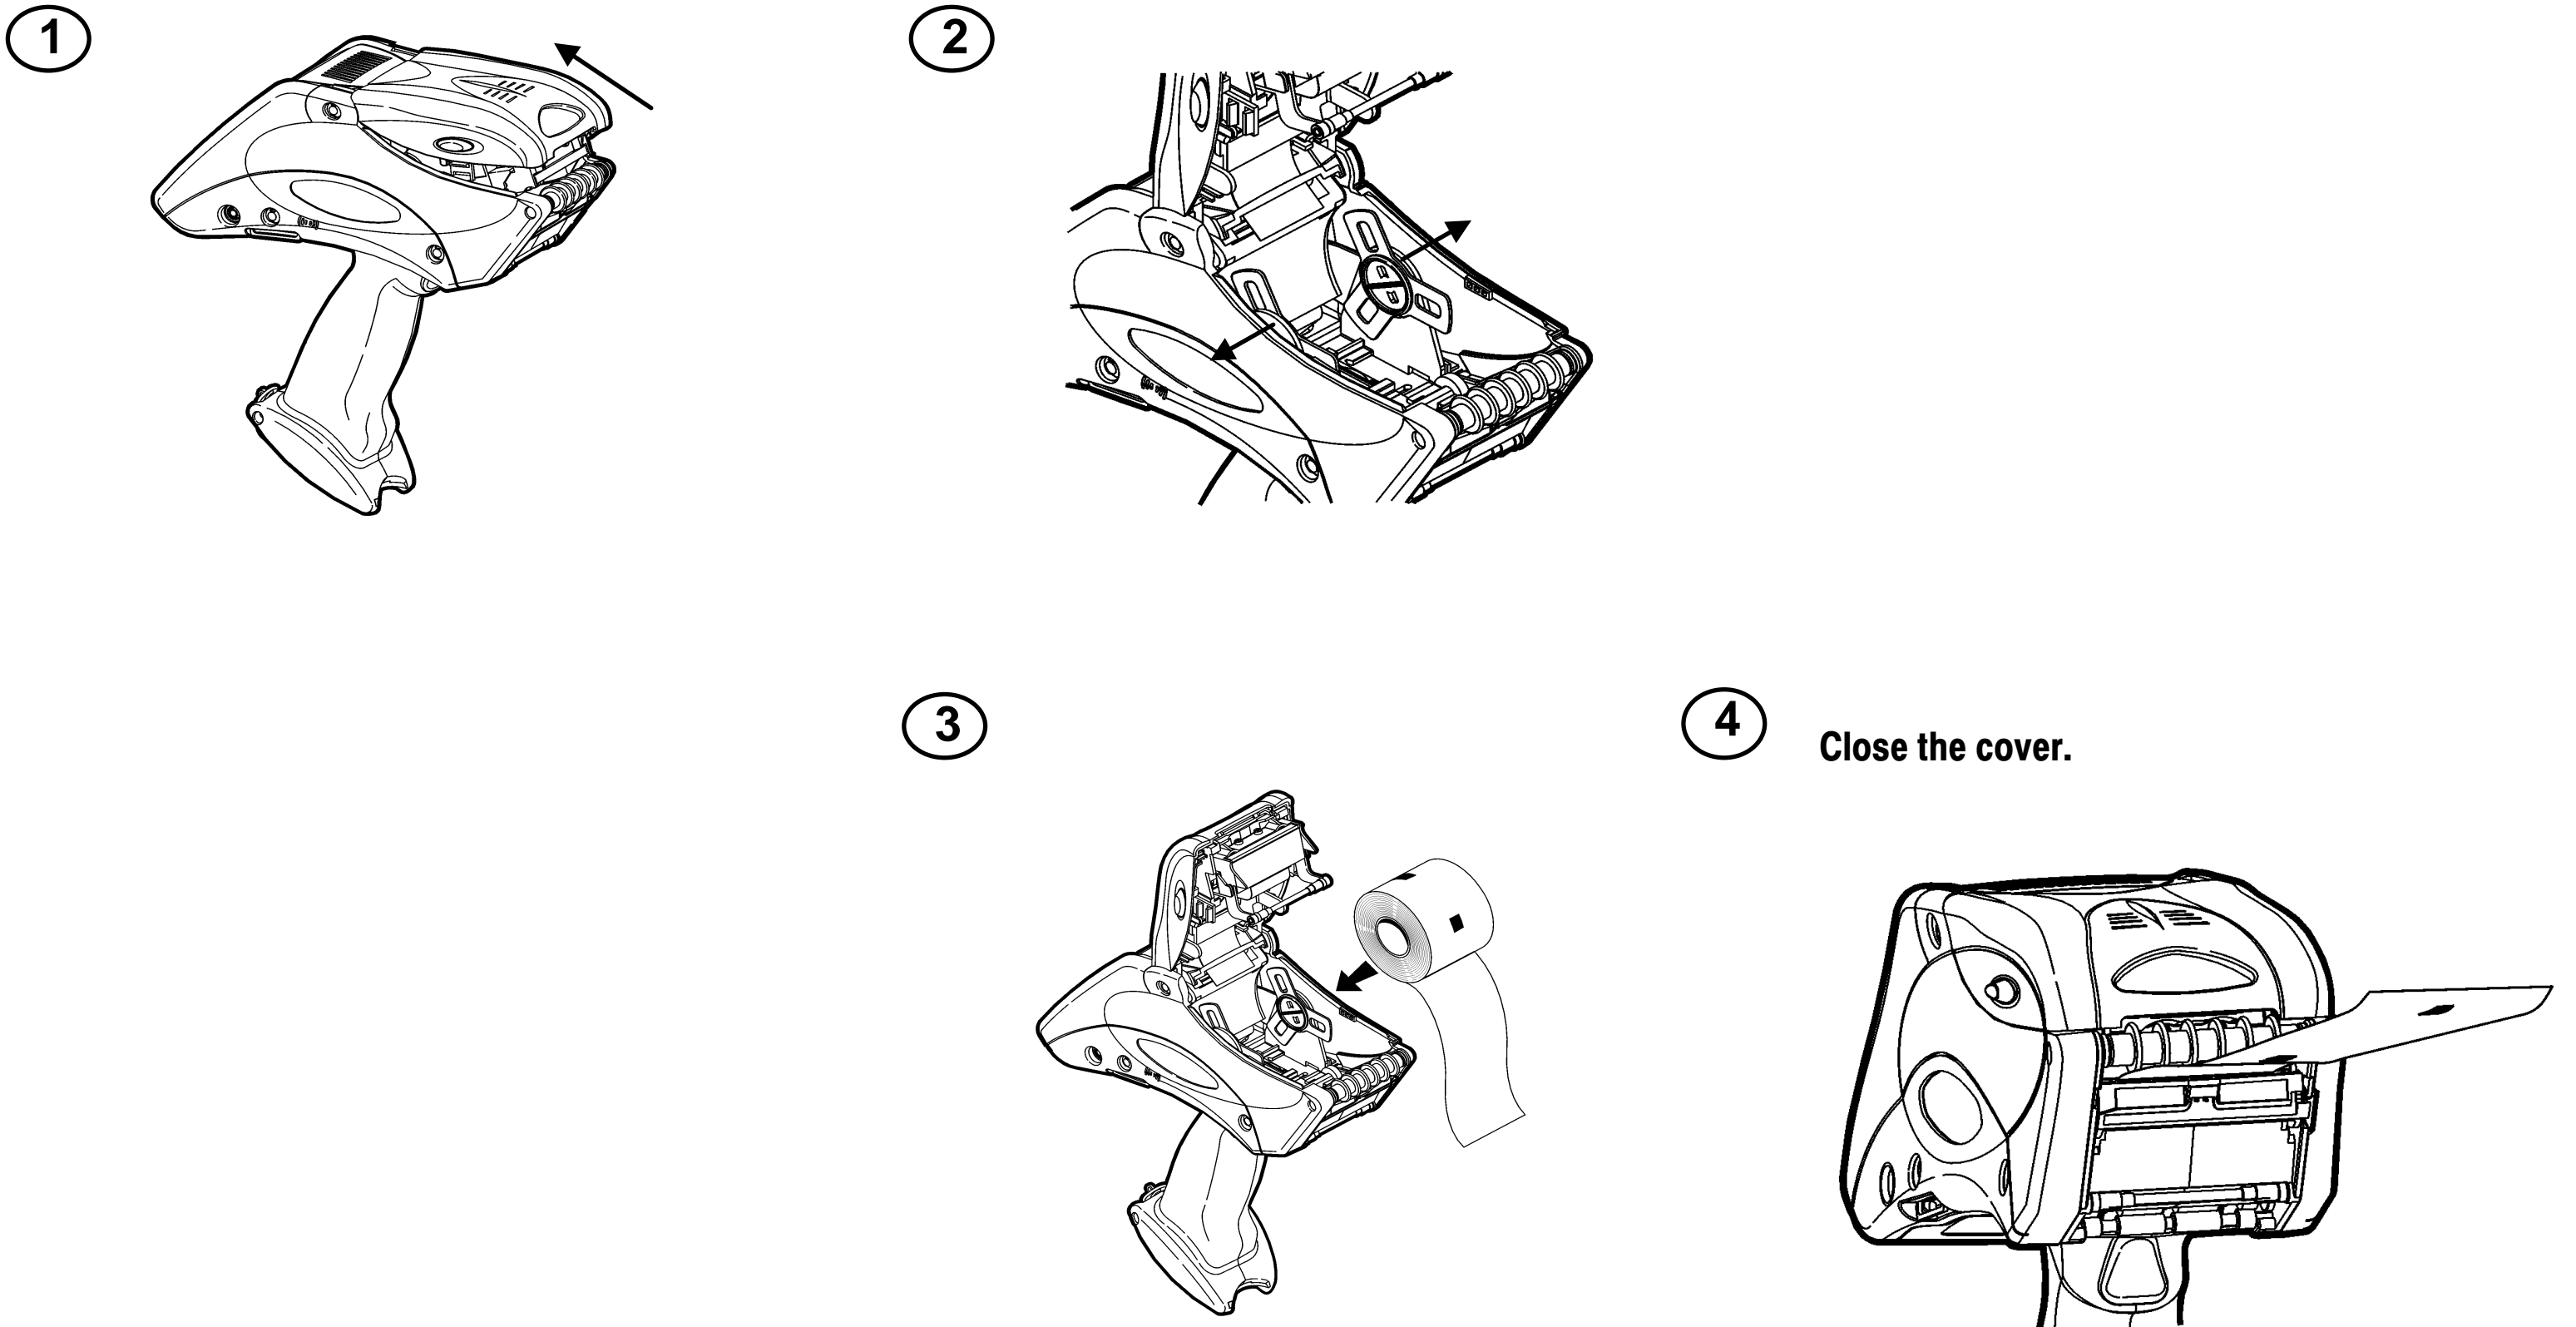


Cleaning Your Printer

Platen Roller

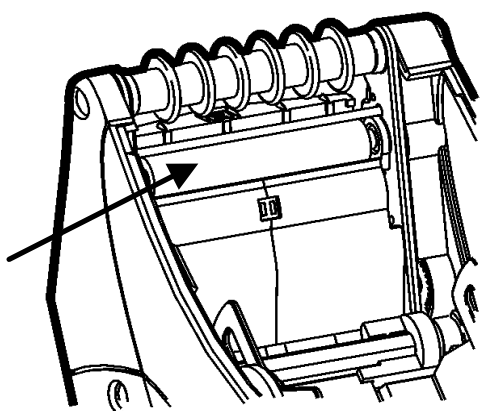


Use a dry, soft-bristle brush.

Pinch and Feed Rollers

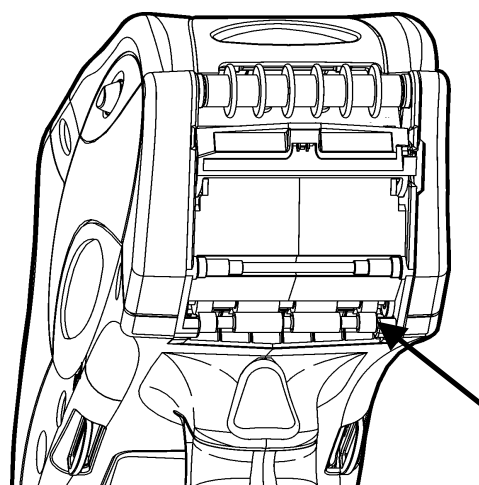


Use a dry, lint-free cloth.

Printhead

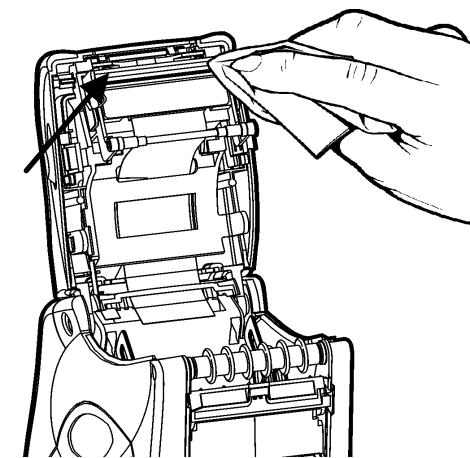


Use a cleaning pen or a soft cloth, lightly moistened with 99% Isopropyl Alcohol.

Printer Flex Cable

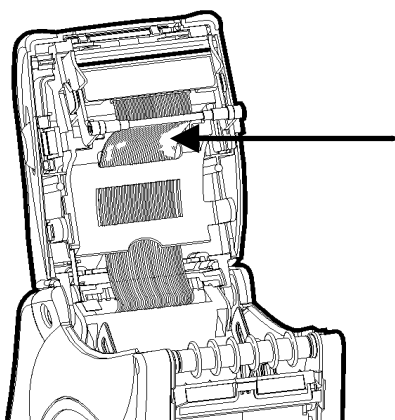


Use a soft cloth, lightly moistened with 99% Isopropyl Alcohol.

On-Demand Sensor

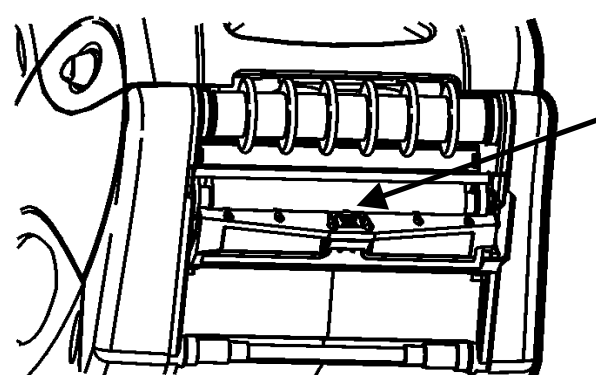


Use a dry cotton swab.

Scanner Window

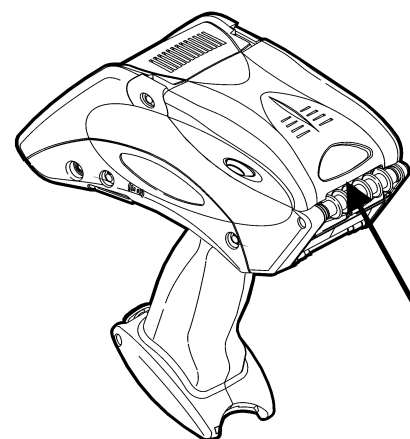

Use a soft cloth, lightly moistened with water.

Black Mark Sensor

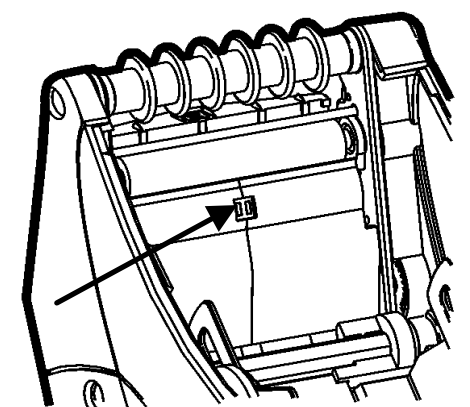

Use a dry cotton swab.

Pull the Label Deflector down.