 


AC ADAPTER OPERATING INSTRUCTIONS

The Monarch® 6063™ AC Adapter provides continuous power to your Monarch® Pathfinder® Ultra® *Silver* 6032™, Monarch® Pathfinder® Ultra® *Gold* 6037™, or Monarch® Pathfinder® Ultra® *Platinum* 6039™ printers. You can use the adapter instead of a rechargeable battery. The adapter plugs into any standard grounded electrical outlet and allows you to print large volumes of labels without switching or recharging the battery.

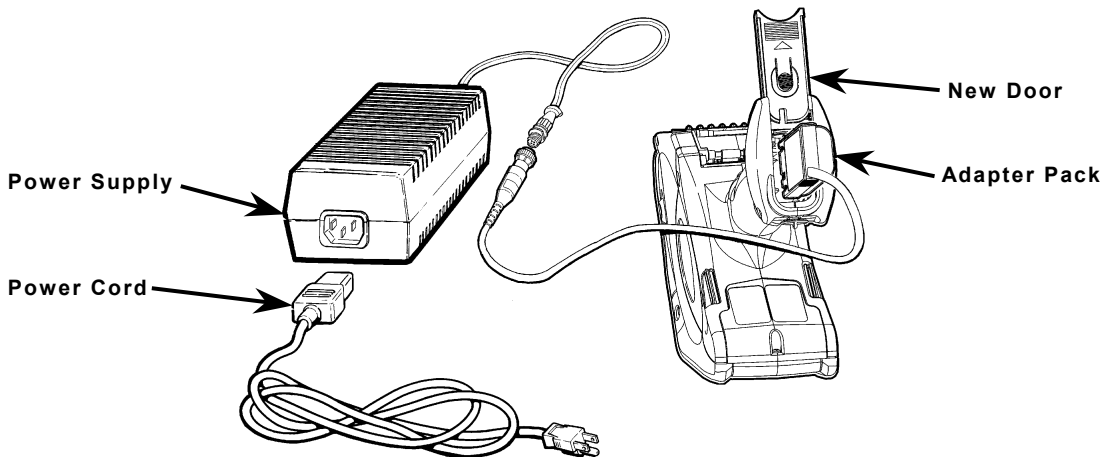

Kit Contents

 
The AC Adapter kit comes with

- ◆ a new battery compartment door with a notch in it.
- ◆ a power cord (domestic models only).
- ◆ an adapter pack.
- ◆ a power supply.


Installing the Adapter

To install the adapter:


1. Press the button on the battery compartment door (located at the bottom of the printer's handle) and slide it open, pulling firmly. Pull the door completely off the printer and lay it aside.

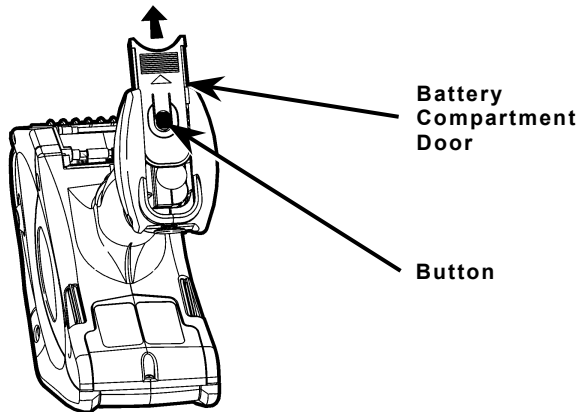

 
2. Pull the battery out of the compartment. Or, place your hand beneath the printer, turn the printer upright, and catch the battery in your hand as it slides out.

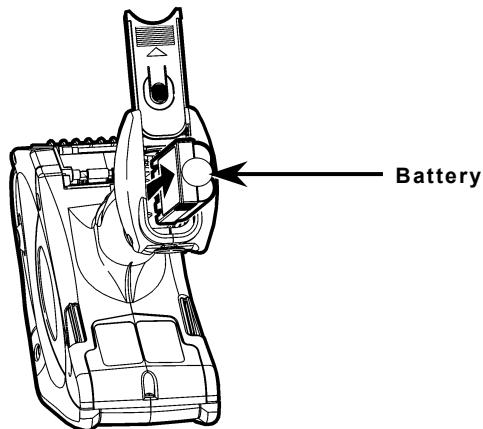

 3. Insert the adapter pack (connector end first) into the printer's battery compartment.
4. Pushing firmly, put the new battery compartment door on the printer. The adapter pack cord should stick out of the notch in the door.

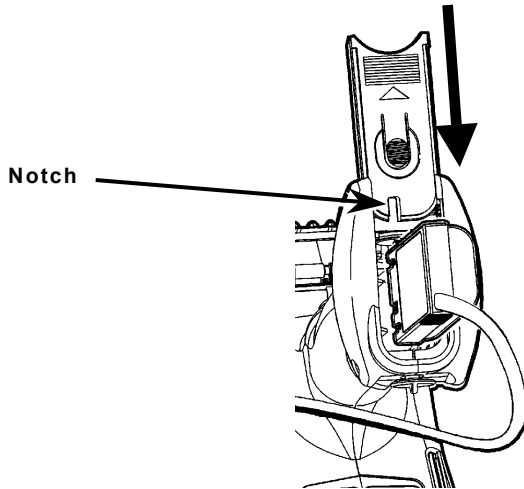

 5. Connect the adapter pack and the power supply by lining up the connectors and screwing them together.

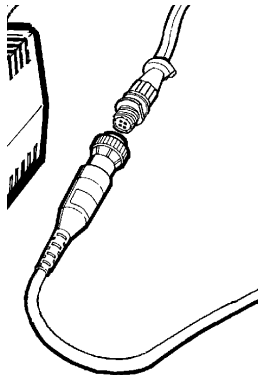

6. Plug the power cord into the power supply.
7. Plug the other end of the power cord into a grounded electrical outlet.

Visit **www.paxar.com** for sales, service, supplies, information, and telephone numbers for our locations throughout the world.

TOLL FREE:

1-800-543-6650 (U.S.A.)

1-800-363-7525 (Canada)