

PRINTER WALL REFERENCE

PAXAR

Pathfinder® Ultra® *Silver* (6032™) Printer


Pathfinder® Ultra® *Gold* (6037™) Printer


Pathfinder® Ultra® *Platinum* (6039™) Printer


See the *Equipment Manual* for more information.


Loading Supplies in Peel Mode


- 1 Turn on the printer and put it into load mode.
6032: Press the Load Key.
6037: Press Function and 0 (zero.)
6039: Select the supply loading option from the display screen.
Or, ask your System Administrator.
- 2 Press the latch buttons and open the supply cover.

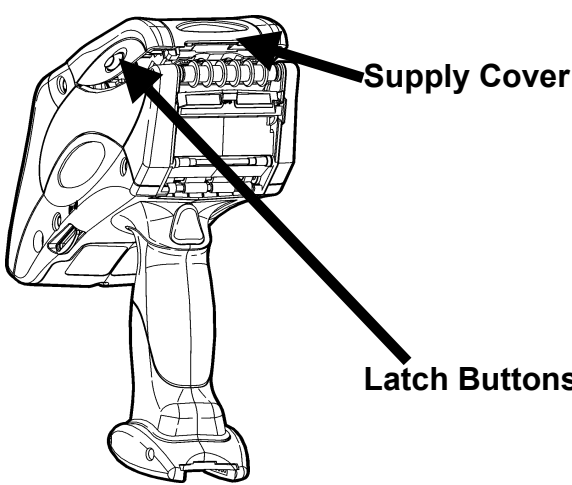

- 3 Open the spring-loaded supply holder.

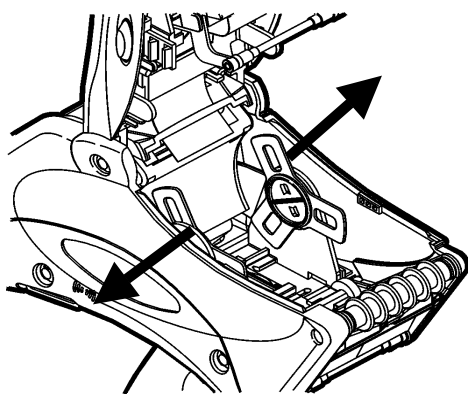

- 4 Insert the supply roll so it feeds from the bottom.

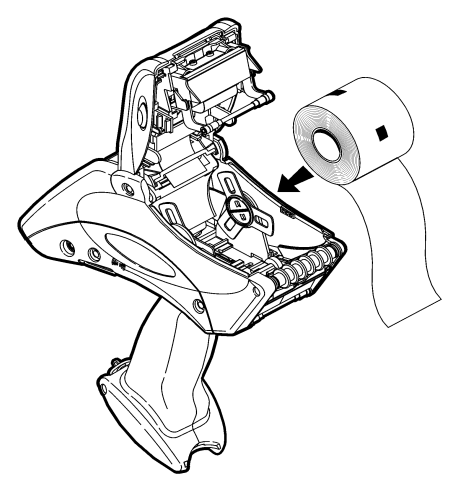

- 5 Peel four inches of labels from the backing paper.
- 6 Pull the Label Deflector down.

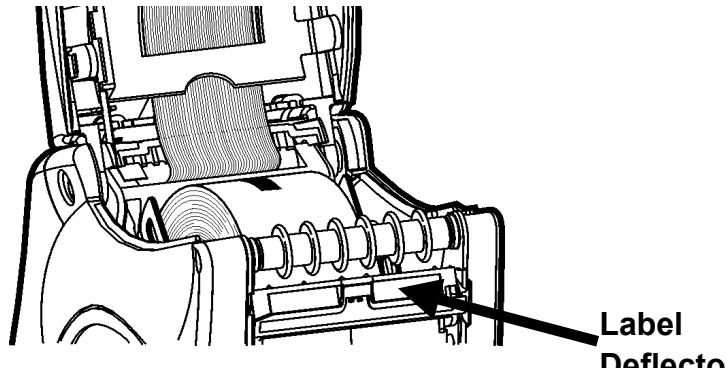
- 7 Feed all four inches of the backing paper *under* the applicator roller, *over* the peel bar, and *under* the label deflector.

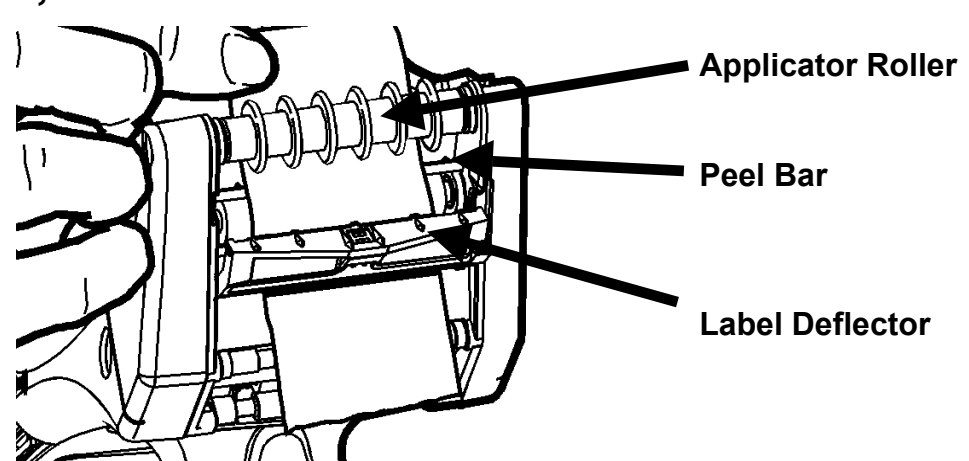
- 8 Push the Label Deflector up until it snaps into place.
- 9 Partially close the cover to the first position.

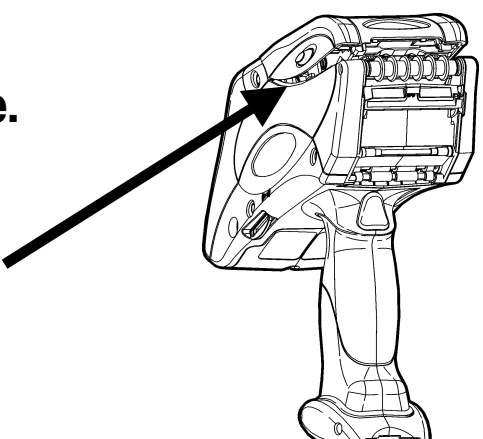

- 10 Pull the backing paper *over* the Guide Roller, down to the Pinch and Feed Rollers. Press the trigger.

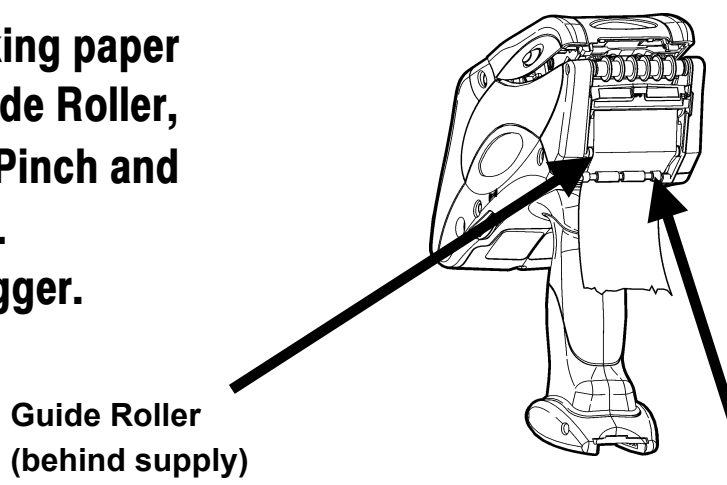
- 11 Close the cover and press ESC or return to the previous menu.

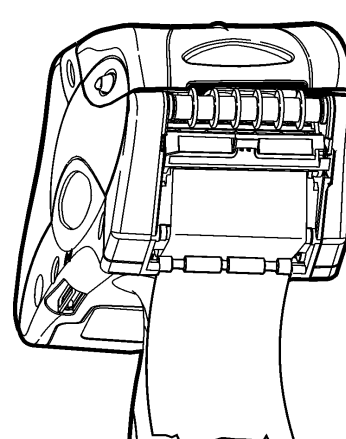


Cleaning Your Printer


NOTE: Always turn off the printer before cleaning.

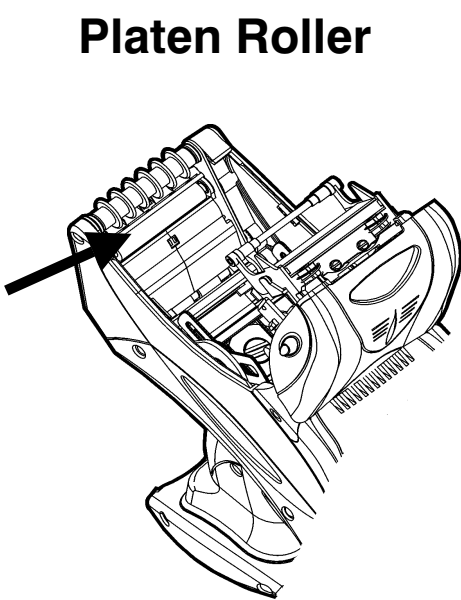


Use a dry, soft-bristle brush.

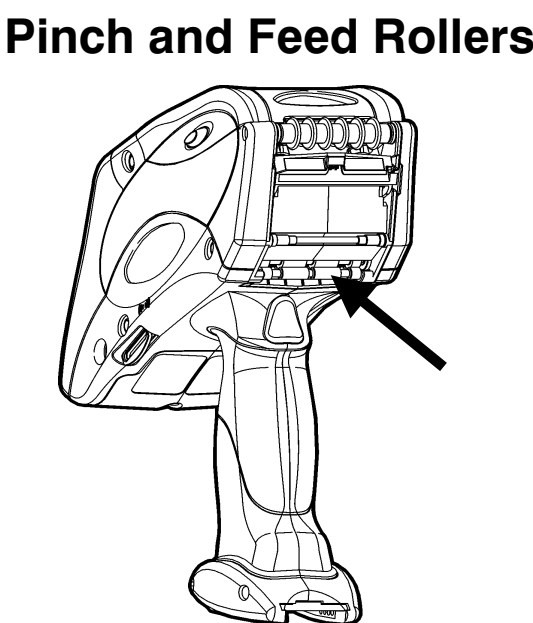


Use a dry, lint-free cloth.

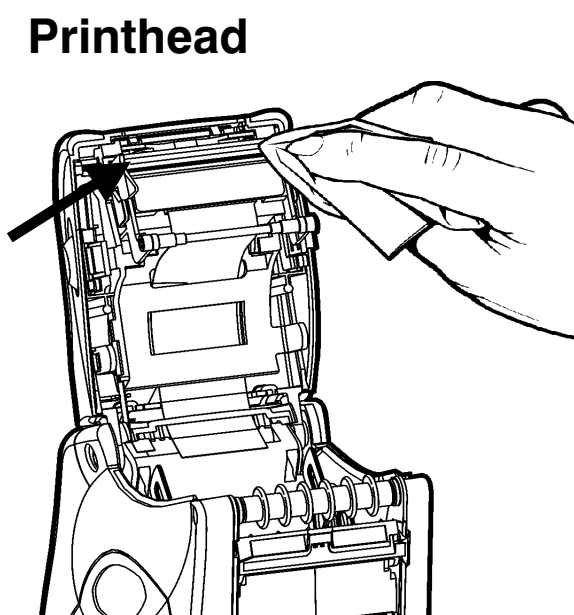


Use a cleaning pen or a soft cloth, lightly moistened with 91% Isopropyl Alcohol.

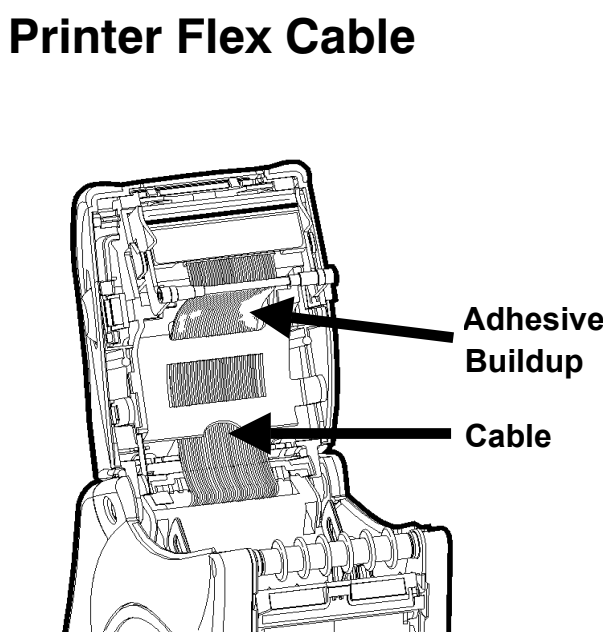


Use a soft cloth, lightly moistened with 91% Isopropyl Alcohol.

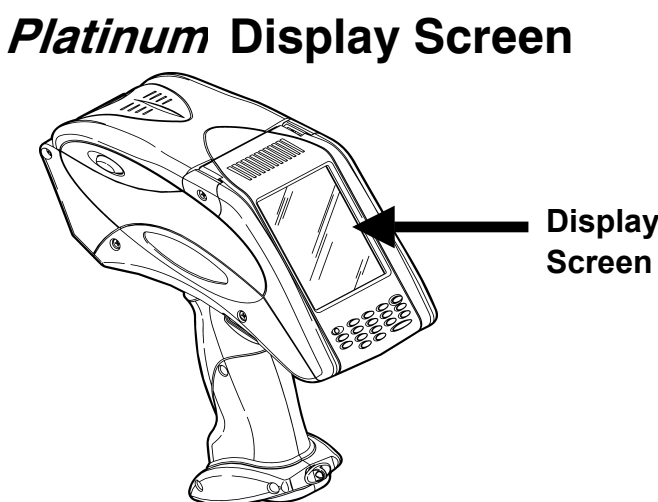


Use a soft cloth, lightly moistened with water.

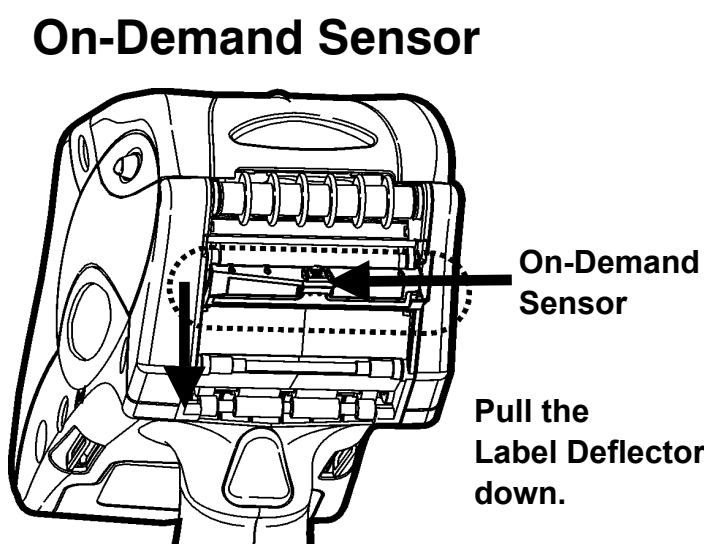

Use a dry cotton swab.

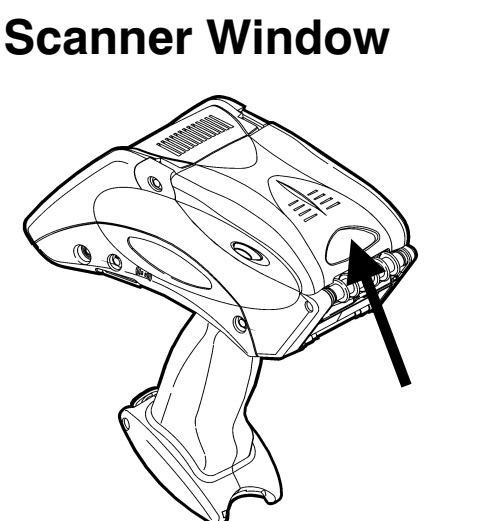

Use a soft cloth, lightly moistened with water.

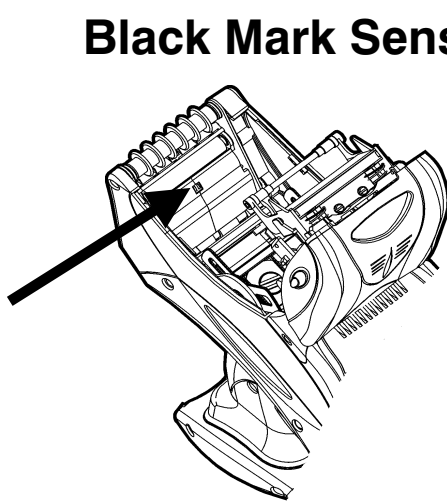

Use a dry cotton swab.

PRINTER WALL REFERENCE

PAXAR

Pathfinder® Ultra® *Silver* (6032™) Printer

Pathfinder® Ultra® *Gold* (6037™) Printer


Pathfinder® Ultra® *Platinum* (6039™) Printer

See the *Equipment Manual* for more information.


Loading Supplies in Non-Peel Mode

- 1 Turn on the printer and put it into load mode.
6032: Press the Load Key.
6037: Press Function and 0 (zero.)
6039: Select the supply loading option from the display screen.
Or, ask your System Administrator.


- 2 Press the latch buttons and open the supply cover.

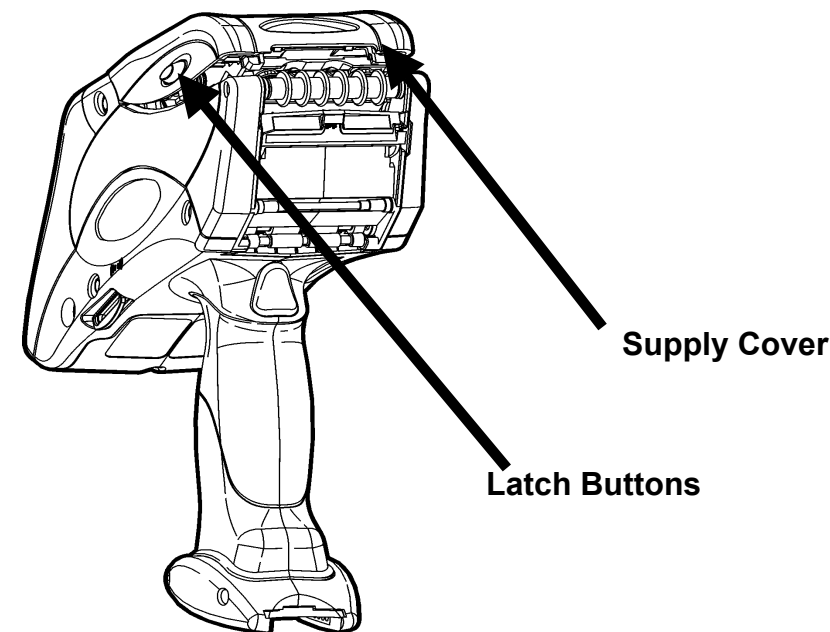


- 3 Open the spring-loaded supply holder.

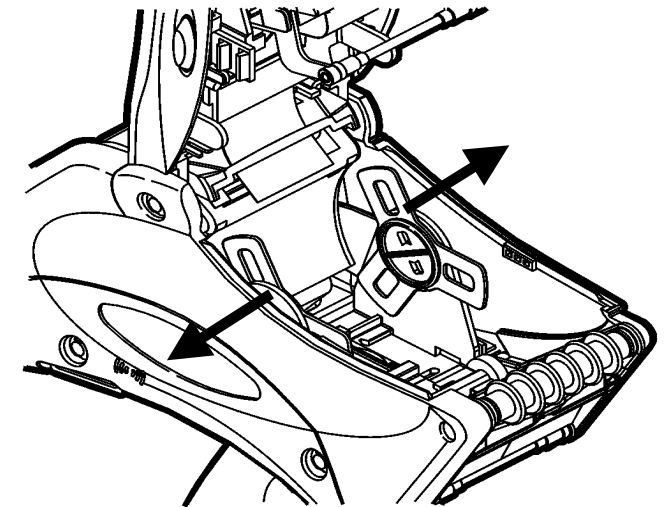


- 4 Insert the supply roll so it feeds from the bottom.

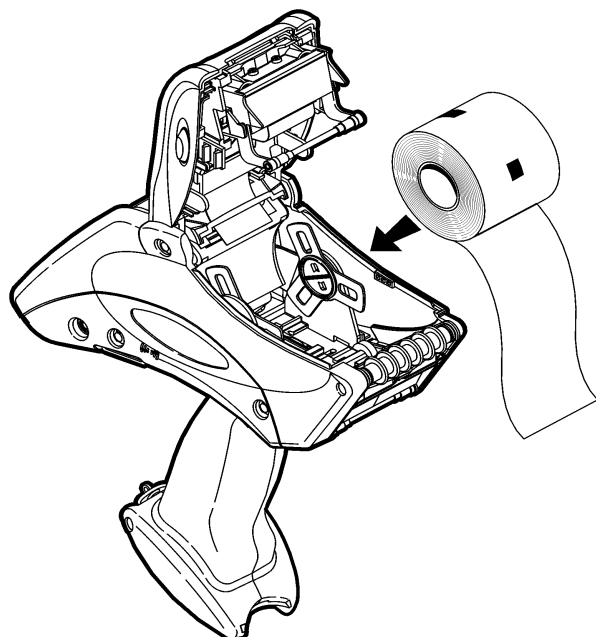

- 5 Feed the supply out the front of the printer, *under* the Applicator Roller and *above* the Label Deflector.

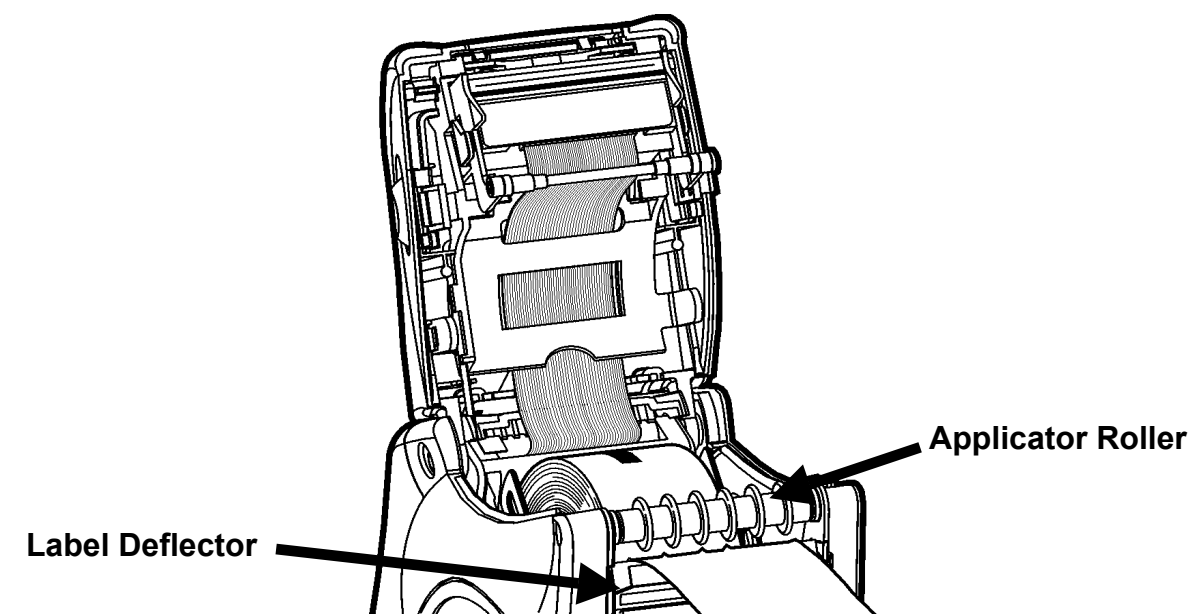


- 6 Close the supply cover and press ESC or return to the previous menu.

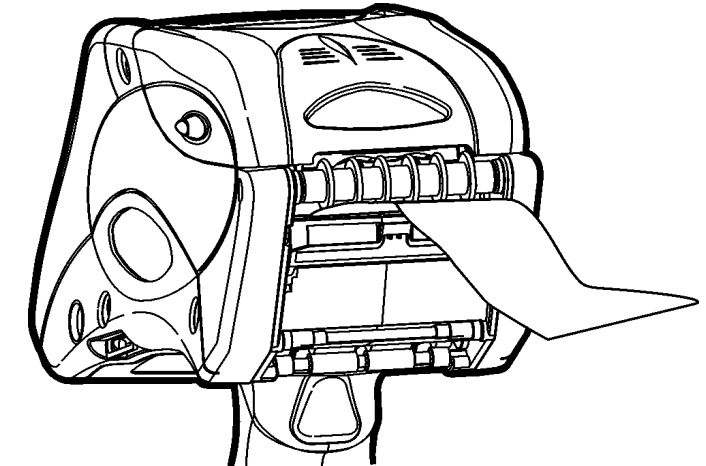

Cleaning Your Printer


NOTE: Always turn off the printer before cleaning.

Platen Roller

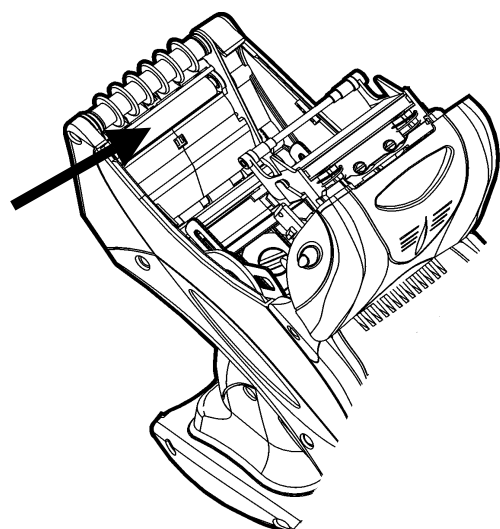


Use a dry, soft-bristle brush.

Pinch and Feed Rollers

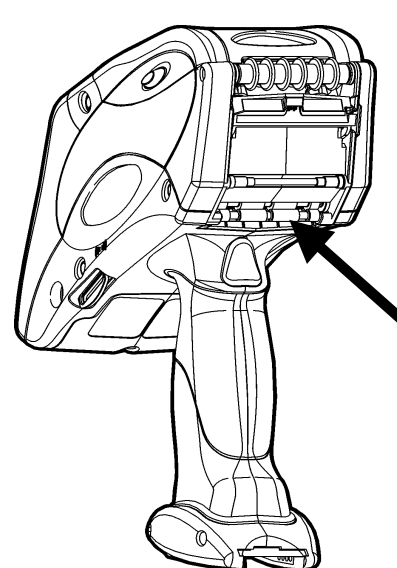


Use a dry, lint-free cloth.

Printhead

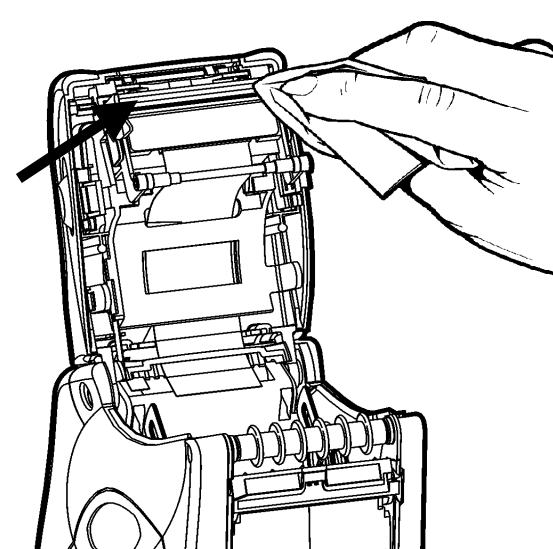


Use a cleaning pen or a soft cloth, lightly moistened with 91% Isopropyl Alcohol.

Printer Flex Cable

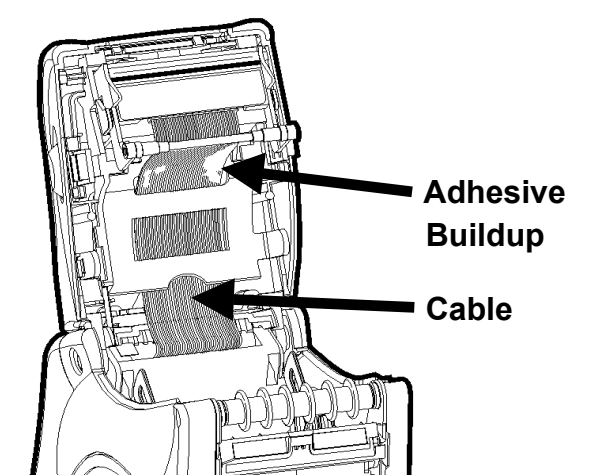


Use a soft cloth, lightly moistened with 91% Isopropyl Alcohol.

Platinum Display Screen

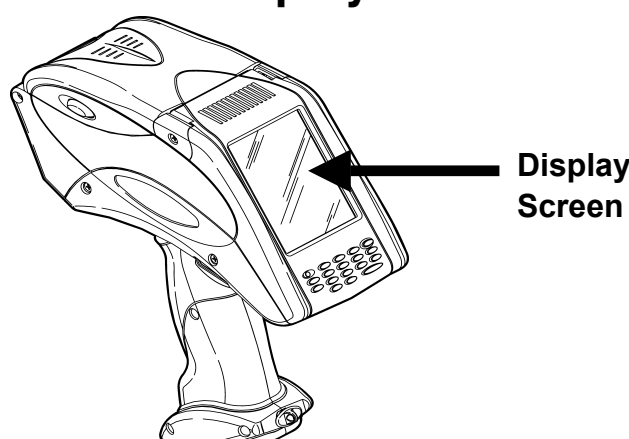


Use a soft cloth, lightly moistened with water.

On-Demand Sensor

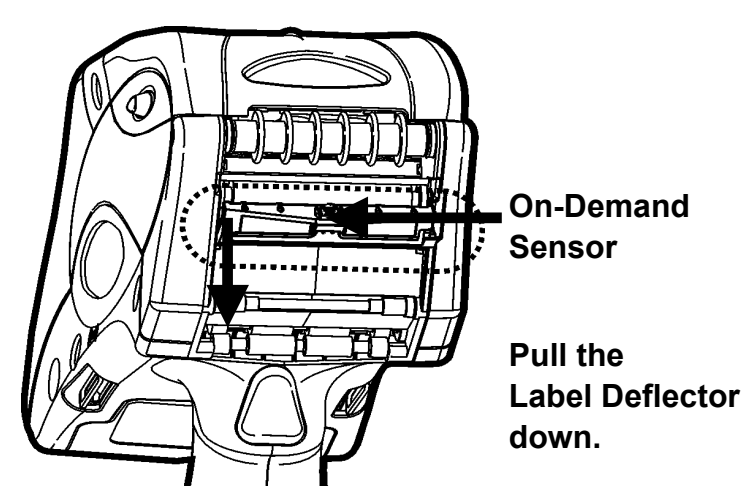


Use a dry cotton swab.

Scanner Window

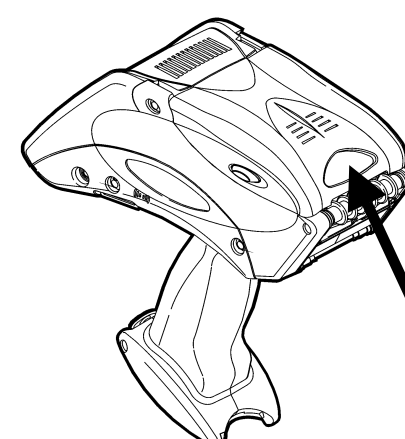

Use a soft cloth, lightly moistened with water.

Black Mark Sensor

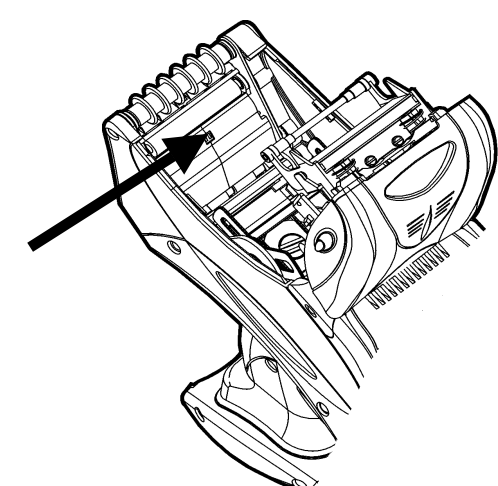

Use a dry cotton swab.